## Procedure for **Downloading & Installing** the Auto-Update Platform and Updating Sensor-Aid/OBD II Module **Firmware Versions**

#### Contents

Part A: Download and install the Auto-Update Platform

Part B: Update the Sensor-Aid/OBDII Module Firmware

- B.1: Tool Automatic Update
- B.2: OBD II Module Automatic Update
- B.3: Tool Manual Update
- B.4: OBD II Module Manual Update

## Part A: Download and install the Auto-Update Platform

#### Description

- The Auto-Update Platform is a software that will automatically connect to the Cub website in order to download the latest Sensor-Aid (Gen3,Gen4 Tool) and/or Cub OBD II Module firmware versions.
- ➢It also gives you the option to manually update the firmware versions (you will have to download the firmware update files from the Cub website beforehand).

>Important notes:

- For using the automatic update option, your PC will need to be connected to the internet.
- In order to be able to update the firmware of your Sensor-Aid Tool(s) and OBD II Module(s), you will have to register your Sensor-Aids' Serial Number(s) in the Cub website first.

• Please go to <a href="https://www.cubautoparts.com/index.php">https://www.cubautoparts.com/index.php</a> and go to the Member login section link in the upper right corner.



#### Step 1 (continued)

• Write your User Name (E-mail address you used when you registered), Password and caption and click on Login.

Сив	Member Login Register Contact us Languages ▼
TPMS Home   TPMS Introduction   TPMS Product Series   TPMS Information & News   Download	Retrofit Product Service
<image/>	CUB TPMS Members Zone

#### Step 1 (continued)

• If the caption is not clear enough, simply click on it and a new caption will automatically appear for you to enter in the input bar next to it.



• Once logged in, go to the Download section and select Software Download.



• If your tool is Cub's Gen3 or Gen4 for passenger vehicles, Please select the file called Auto\_Updater\_C1.7.1 (82.5MB/zip).

0	Software Download		
	Gen3_ID to PC Program V2.4	2015-10-05	Unive
	Multi-Programmer PC Software with V100_36	2017-01-26	Progr (PUR
	Gen4_ID to PC Software Program	2020-08-25	
	TIM Truck V1.0.0	2021-04-28	
	Auto_Updater_C1.7.1 (82.5MB)	2021-08-03	
	Auto_Updater_RT1.2 (82.5MB)	2021-08-03	CLIB
			COD





ersal PUR TPMS : Providi rammable / Universal /Re R) solution ......(More info

**RetroFit** 

TOUG



PUR TPMS : Base on ric ...

#### Step 3 (continued)

• If your tool is Cub's Gen4 for Truck, Please select the file called Auto\_Updater\_RT1.2 (82.5MB/zip).

			U
	Software Download		
	Gen3_ID to PC Program V2.4	2015-10-05	Univers
z	Multi-Programmer PC Software with V100_36	2017-01-26	Program
	Gen4_ID to PC Software Program	2020-08-25	(
	TIM Truck V1.0.0	2021-04-28	
	Auto_Updater_C1.7.1 (82.5MB)	2021-08-03	
	Auto_Updater_RT1.2 (82.5MB)	2021-08-03	
			CUB PI





sal PUR TPMS : Providi mmable / Universal /Re solution ......(More info

**RetroFit** 

TOUG



UR TPMS : Base on ric ...

• The program file will start to download. Please wait for some minutes. Once downloaded, unzip the file and double click on the application file. The program will start installing.

📜 🔉 Aut	to_Updater_C1.71					∨ ひ 搜	尋 Auto_Upda ,
	名稱 ^		修改日期	類型		大小	
ᆂᇺᇏᄬ	[Europe] TPMS Tool & OBD-II Module Update Platform C1.7.1		2020/11/27 下午 06:00	應用程式		84,584 KE	3
局开電名							
📜 > Aut	to_Updater_RT1.2					∨ ὒ 搜	尋 Auto_l
	2稱		修改日期	類型	1	2/1/2	
N	🐺 [Truck] TPMS Truck Tool & OBD-II Module Update Platform RT1.2	ר	2021/5/14 上午 09:22	應用程式		84,525 KB	
為升雷導							

• Once the installation is completed, the icon below will be shown on your desktop. Double-click on it.





• The Auto-Updater Platform has been successfully installed. Keep your internet alive, Click the icon and if you have seen the below upgrade message, please click "YES" to upgrade your updater.

TPMS Tool & OBD-II Mod	ule Update Platform C1.7.1	- 🗆 X
● Auto ○ Manual	File Location	<b>Cub</b> ® Genuine Parts
Update	Serial Number	Network Status
Update Status Stand By	Update available. Do you want to update your Updater software to the latest version v1.7.5?	× tatus • USB Disconnected
USB Disconnecte	是(Y) 否(N)	
sert Tool or OBD-II Mo	dule	<b>.</b>

## • You can select the language of your preference in the menu at the lower right.

IPMS Tool & OBD-II Mod	ule Update Platform C1.7.5		_	×	_
Auto O Manual	File Location	-			
Update	Cariel Number	/	Lud		
	Serial Number		Network Status	d	
Update Status	Progress		USB Status		Chinese (Traditional) Czech
U otanici by		0%	💝 USB Disconne	ec 💻	Deutsch
Message				=	Dutch
USB Disconnected					English
					French
					Italian
				-	Polish
				-	Sweden
				-	Spanish
Insert Tool or OBD-II Mo	dule			-	

### Part B: Update the Sensor-Aid/OBDII Module Firmware

## B.1: Tool Automatic Update

• Make sure your computer is connected to the internet. This will be indicated by the green light in the Network Status.

Auto O Manual	File Location	A	
Update	Serial Number	×	Network Status
Update Status	Progress	0%	USB Status
Message USB Disconnected			

## • Make sure you select the Auto option for automatic programming.

🛄 TPMS Tool & OBD-II Moo	lule Update Platform C1.7.5		- 🗆 X	
Auto     Manual	File Location	$\sim$	Cub	
	Serial Number		Network Status	
Stand By	Progress	0%	USB Status	
Message				
USB Disconnected				
Insert Tool or OBD-II Mo	dule		<b>.</b>	
				CUB E

Connect your Sensor-Aid to the PC via USB cable and turn it on. The Auto-Update Platform will detect
the Serial Number of the tool. Note: Please make sure you are using a tool whose Serial Number has
previously been registered in the Cub website, otherwise you will not be able to update it. The latest
available firmware update version in the Cub Website will be displayed under File Location.

U TPMS Tool & OBD-II Mod	lule Update Platform C1.7.5	- 🗆 X	-
Auto      Manual	File Location Official website (version: 1.55)	TOOL	A
	Serial Number 000000B3573B	Network Status  NET Connected	
Waiting	Progress	USB Status 0% USB Connected	
Message USB Disconnected USB Connected *** [Hexfile-Version] *** Do you want to d	Fetching successful ownload and update to version 1.55? (press 'U	pdate' if yes)	
		C1b	
			CUB ELECPARTS INC

#### Step 3 (continued)

• If you want to update the Gen4 Tool, Please connect your Gen4 Tool to the PC via USB cable and switch your tool to USB PORT mode.

Choose the UPDATE function in the tool.



transferred from the Update Platform to the tool.

• Click on **Update or Download**. The Auto-Update Platform will immediately start updating your tool to the latest firmware version available on the Cub website.

,	File Location	TOOL
	official website (version: V1.55)	
Download	Serial Number	Network Status
date Status	EF400386F0FBF0F100	NET Connected
Waiting	Progress	USB Status
	0%	USB Connected
* Do you want to o SB Disconnected	download and update to version 1.55? (press 'Update' if ye	es)
SB Connected * [Hexfile-Version * [Hexfile-Version	] Starting to fetch, waiting ] Fetching successful	

# B.2: OBD II Module Automatic Update

• When you connect the OBDII module to PC, you will see the below diagram and please click the correct OBDII picture you want to update.

TPMS Tool & OBD-II Mod	lule Update Platform C1.7.5		- 🗆 X
Auto O Manual	File Location	Ô	<b>T</b> Ub
Download	Serial Number		Network Status
Update Status	Progress	0%	USB Status
Message	Click on the image of your OBI	D-II Module below, then click Update	
OBD- Modu	II JPNS	OBD II	Tub WIRELESS OBD-1
			v

• Make sure your computer is connected to the internet and the latest OBD II version available on the Cub website will be shown under **Version**. Click Update icon to start the update process.

official website	^ ~	OBD-II Module
Version 4.44		Network Status
Waiting	0%	USB Status
e Connected exfile-Version] Fetching successful		



# B.3: Tool Manual Update

• Make sure you are logged on to the Cub website (refer to Part A Step 1 of this user guide). Go to the Download section and select Firmware Update.



#### • Select your Sensor-Aid tool.



• Select the firmware version you wish to download.



#### • Key in your Serial Number and click on Submit.



• Click on Download File underneath the Serial Number input field.



• Open the Auto-Update Platform and select the Manual option. The connection to the internet is not necessary at this time.

Auto     Manual			
Open	Version		Network Status
Stand By	Progress	0%	USB Status
lessage Update Succeede Please remove the USB Disconnect *** Change to 'Mar	d e device to finish the update nual' mode		^

• Connect the tool to the PC via the USB cable. The USB status will change to USB connect and the Serial Number will be shown. Note: The Serial Number shown on the Platform comes from the number you keyed in in Step 5 of this section and it must match the Serial Number of your tool (you can find it under Settings in the tool).

	TPMS Tool & OBD-II Module Update Platform v1.4	
O Auto  Manual	File Location	TOOL
	Serial Number 000000E6574E	Network Status
Waiting	Progress 0%	USB Status
Message		
USB Disconnect *** Change to 'Man USB Disconnect USB Disconnect USB Connect	ual' mode	
		Cub.



• Click on Open.



• Browse the location in your PC where you downloaded the firmware update file to and select it. The file name will be displayed under File Location. Click on Update.

	File Location	
Lindate	C:\Users\01146\Downloads \CUB_000000E6574E_1.34@2016-7.hex	TOOL
Opuale	Serial Number	Network Status
Ipdate Status	000000E6574E	NET Disconnect
Waiting	Progress	USB Status
		0%
lessage USB Disconnect		
*** Change to 'Mai USB Disconnect	nual' mode	
USB Disconnect		
USB Connect		

# B.4: OBD II Module Manual Update

• Make sure you are logged on to the Cub website (refer to Part A Step 1 of this user guide). Go to the Download section and select Firmware Update.



#### • Select your Sensor-Aid tool.



• Select the firmware version that has the OBD II firmware included (it has "OBD" in the file name).



• Write your tool's Serial Number and click on **Submit** (Note: the OBD II Module does not have a Serial Number but the Cub OBD II firmware is bundled to the tool's firmware file, which requires the tool's Serial Number in order to download the firmware update file).



• Click on Download File underneath the Serial Number input field.



• Open the Auto-Update Platform and select the Manual option. The connection to the internet is not necessary at this time.

Auto     Manual			
Open	Version		Network Status
Stand By	Progress	0%	USB Status
lessage Update Succeede Please remove the USB Disconnect *** Change to 'Mar	d e device to finish the update nual' mode		^

• Connect the OBD II Module to the PC via the USB cable. The USB status will change to USB connect.

O Auto  Manual	File Location	OBD-II TEMS	
Open	Version	Network Status	$\frown$
Update Status	Program	NET Disconnect	
Waiting	0%	USB Connect	14
Message			1
USB Connect USB Disconnect USB Connect USB Disconnect		^	
USB Connect			

• Click on Open.



• Browse the location in your PC where you downloaded the firmware update file to and select it. The file name will be displayed under File Location. Click on Update.

Lindata	C:\Users\01146\Downloads \CUB_000000E6574E_1.34@2016-7.hex	OBD-II Module
Opdate	Version	Network Status
Waiting	Progress 0%	USB Status
lessage USB Connect	n] Cannot fetch, network disconnect, try to use 'Manu	al' mode
*** Change to 'Ma	nual' mode	

• The **Progress** bar will indicate the updating progress and the OBD II version will be displayed under **Version**.

⊖ Auto ⊛ Manual		OBD.II PNS
Undate	C:05er5/01140/Downloads \CUB_000000E6574E_1.34@2016-7.hex	Module
opuate	Version	Network Status
pdate Status	4.20	NET Connect
O Waiting	Progress	USB Status
lessage	30/8	USB Connect
Initializing device of Frasing sector 0x0	done 2020000 done	
Programming addr	ress 0xC015100	

• When the update is finished, the Update Status will show "successful". Please disconnect your OBD II Module from the PC.

	File Location	
Undate	C:\USers\01146\Downloads \CUB_000000E6574E_1.34@2016-7.hex	OBD-II Module
opuate	Version	Network Status
Update Status	4.20	NET Connect
	Progress	USB Status
Message	2020000 dama	
Erasing sector uxu	ess 0xC022300 done	
Programming addr		
Programming addr		
Programming addr Update Succeedec Please remove the	device to finish the update	

## Congratulations! You are now ready to use the Auto-Update Platform and to update your Sensor-Aid and OBD II Module.

